

During normal use, the easy clean locking mechanism is in locked position **L**, (see below), and will need to be unlocked **U**, to allow the sash to slide across.

To engage easy clean mode:

1: Open the window until the sash reaches fully open position.

2: Apply further pressure to open the window and you will notice the locking mechanism going into pressurised position **P**, (see below).

3: Whilst keeping the locking mechanism in pressurised position, slide the sash at the bottom appx 10mm to release the locking pins. Repeat this process for the top by sliding the sash anywhere above the centre of the sash (see diagram 1). The mechanism at the top and bottom should now be unlocked **U**, (see below).

4: Once the mechanism has been unlocked, the sash can be moved to easy clean position. Whilst supporting the sash equally above and below the centre, push the sash across until it will move no further.
(see diagram 2)

To reset the mechanism to locked position, simply pull the handle as if you were closing the window normally.

(Diagrams below show hinge side left internally, for hinges fitted to the right sides internally, simply push the sash to the right).

